Quick Start Guide

TMD3782EVM

TMD3782 Light-To-Digital Color Ambient Light Sensor With Proximity Detection

Version 1.1





Table of Contents

1	Out of the box	3
2	Software installation	3
3	Connect Hardware	3
4	Start Application	4
5	Contact and Support	5



1 Out of the box

Each TMD3782 EVM comes with the following components:

Controller board v2.1

- TMD3782 Daughterboard
- USB Cable with A connector and mini B connector
- Flash Drive with Application Software and Documents



2 Software installation

Most PCs should have one or more Universal Serial Bus (USB) ports. Install the **ams** flash drive into an unused USB port.

- 1. Double-click the Setup.exe file on the flash drive, or
- Click Start -> Click Run -> Type E: setup.exe and press Enter. IMPORTANT: Use the
 appropriate drive letter in the above command to install the software. Flash Drive will
 commonly be assigned the next available drive letter for example C: hard drive D: CD-ROM
 E: flash drive

The Digital Light Sensor Setup Wizard will open and guide you through the installation of the TMD3782 host software. (Figures 2 through 8). To re-install, run the setup.exe file again. To remove the software from your computer, Select **ams** -> TMD3782 EVM -> Uninstall TMD3782 EVM or use the Windows Control Panel (Figure 9).

3 Connect Hardware


Plug the TMD3782 Daughterboard into the Controller board. (Figure 1) Always use ESD procedures when handling the EVM. Using the enclosed USB cable, plug the mini-B connector into the EVM module. Using the other end of the cable, plug the USB A connector into a USB port on the computer.




4 Start Application

Click the digital Light Sensors icon on the desktop




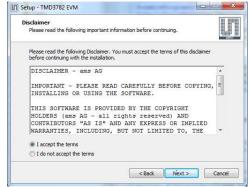


Welcome Screen

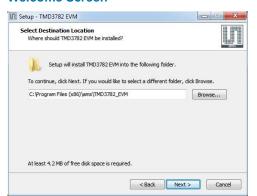

Liability Disclaimer

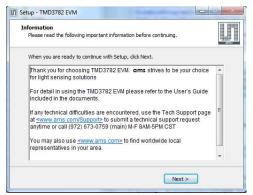

Select Installation Folder

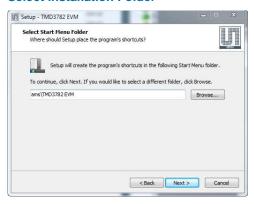


Thank you Screen



Select Start Menu Folder

Installation Completely Successfully



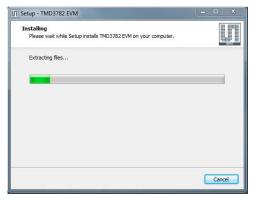



Installation in Progress

Remove Installation

5 Contact and Support

For detail in using the TMD3782 EVM please refer to the User's Guide included in the documents. If any technical difficulties are encountered, use the Tech Support page at http://www.ams.com/Support to submit a technical support request anytime or call (972) 673-0759 (main) M-F 8AM-5PM CST You may also use http://www.ams.com to find worldwide local representatives in your area.